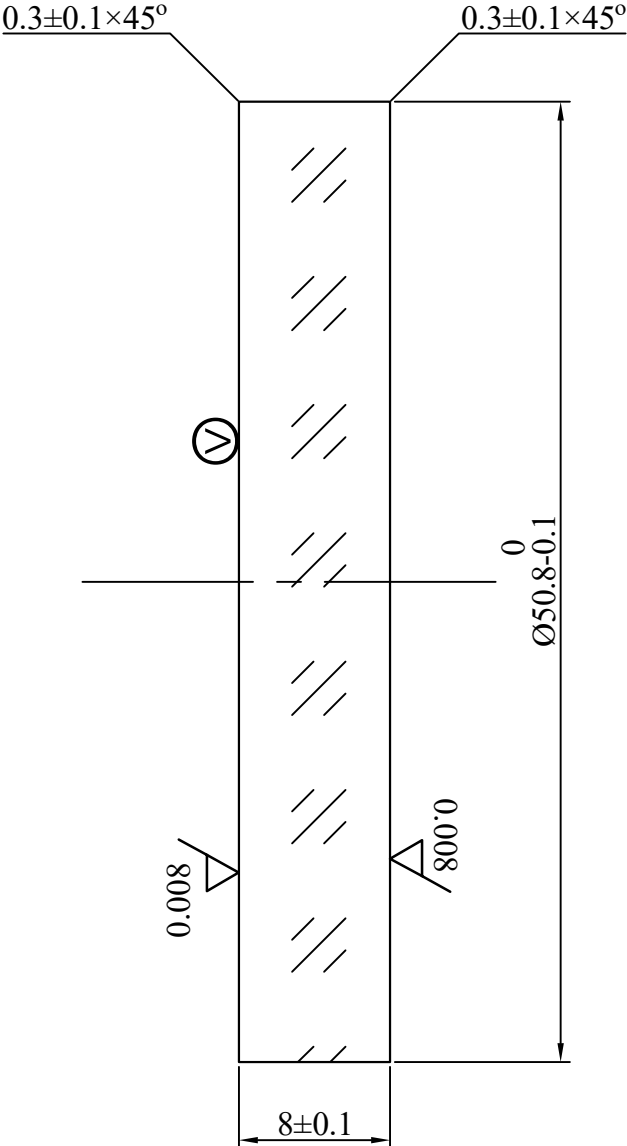


修 饰 处 理 与 热 处 理										表 面 光 洁 度																																														
对材料的要求 <table><tr><td>ΔnD</td><td>1C</td></tr><tr><td>Δ(R-nC)</td><td>1C</td></tr><tr><td>均 匀 性</td><td>1</td></tr><tr><td>双 折 射</td><td>1</td></tr><tr><td>光吸收系数</td><td>3</td></tr><tr><td>条 纹</td><td>1C</td></tr><tr><td>气 泡</td><td>0A</td></tr></table> 对零件的要求 <table><tr><td>N₁</td><td>2</td></tr><tr><td>ΔN₁</td><td>0.4</td></tr><tr><td>N₂</td><td>2</td></tr><tr><td>ΔN₂</td><td>0.4</td></tr><tr><td>C</td><td>0.02</td></tr><tr><td>P</td><td><3'</td></tr><tr><td>D₀</td><td>45.7</td></tr><tr><td>ΔR</td><td>A</td></tr><tr><td>B</td><td>III</td></tr><tr><td>⊖</td><td></td></tr></table> 对镀膜的要求 <table><tr><td>种 类</td><td>⊙</td></tr><tr><td>峰值波长</td><td></td></tr><tr><td>波 段</td><td></td></tr><tr><td>I</td><td></td></tr><tr><td>R</td><td></td></tr></table>										ΔnD	1C	Δ(R-nC)	1C	均 匀 性	1	双 折 射	1	光吸收系数	3	条 纹	1C	气 泡	0A	N ₁	2	ΔN ₁	0.4	N ₂	2	ΔN ₂	0.4	C	0.02	P	<3'	D ₀	45.7	ΔR	A	B	III	⊖		种 类	⊙	峰值波长		波 段		I		R		其 余 $\sqrt[1.6]{}$		
										ΔnD	1C																																													
										Δ(R-nC)	1C																																													
										均 匀 性	1																																													
										双 折 射	1																																													
										光吸收系数	3																																													
										条 纹	1C																																													
										气 泡	0A																																													
										N ₁	2																																													
										ΔN ₁	0.4																																													
N ₂	2																																																							
ΔN ₂	0.4																																																							
C	0.02																																																							
P	<3'																																																							
D ₀	45.7																																																							
ΔR	A																																																							
B	III																																																							
⊖																																																								
种 类	⊙																																																							
峰值波长																																																								
波 段																																																								
I																																																								
R																																																								
																																																								
技 术 要 求																																																								
1. ⊙ JB/T8226.3-1999,外反射膜, 波长范围: 970-1150nm, 45°角入射, 平均反射率99.5%, 要求边缘整齐, 不应有膜欠。																																																								
2.材料要经过消应力回火处理。																																																								
责 任 描 图		签 字										名 称		图 纸 编 号		比 例																																								
描 校												970-1150nm超快反射镜		FR-B130026		2.5:1																																								
旧 底 图 总 号		标 记		处 数		更 改 依 据		签 名		日 期		材 料		数 量		重 量																																								
												熔石英																																												
底 图 总 号		设 计										所 属 装 配 图 号		共 张		第 张																																								
		制 图																																																						
		检 图																																																						
日 期		签 名		描 图		校 对		会 签																																																
				标 准																																																				
				批 准																																																				
													OMTOOLS																																											